



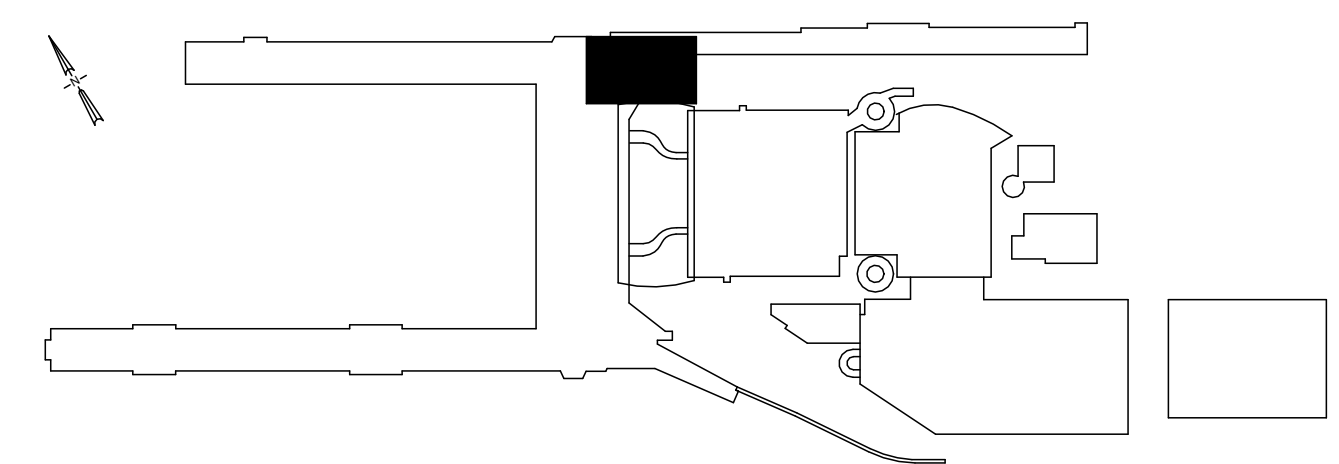

- A. COORDINATE WORK WITH ALL OTHER TRADES.
- B. VERIFY ALL EQUIPMENT CONNECTIONS WITH THE MANUFACTURERS CERTIFIED DRAWINGS. VERIFY AND PROVIDE TRANSITIONS TO FURNISHED EQUIPMENT. FIELD VERIFY AND COORDINATE ALL DIMENSIONS BEFORE FABRICATION.
- C. DRAWINGS ARE DIAGRAMMATIC. NOT ALL OFFSETS AND TRANSITIONS IN PIPING ARE SHOWN IN THE DRAWINGS. PROVIDE OFFSETS AND TRANSITIONS REQUIRED FOR INSTALLATION.
- D. ALL VALVES, WATER HAMMER ARRESTORS, ECT. NEED TO BE INSTALLED IN READILY ACCESSIBLE LOCATIONS.
- E. EXISTING WORK SHOWN IS EXISTING TO REMAIN UNLESS NOTED OTHERWISE.
- F. VERIFY EXACT SIZES, LOCATIONS, INVERTS AND ELEVATIONS PRIOR TO RUNNING ANY PIPING. REFER TO ARCHITECTURAL DRAWINGS FOR EXACT LOCATIONS OF ALL FIXTURES AND EQUIPMENT.
- G. PROVIDE WATER HAMMER ARRESTORS BEHIND ACCESS PANEL FOR URINAL BANKS AND BEHIND TOILET SEAT COVER DISPENSER FOR WATER CLOSETS. SIZE AND LOCATE WATER HAMMER ARRESTORS PER PDI STANDARDS.
- H. TRAP PRIMING SHALL BE PROVIDED FOR ALL FLOOR DRAINS AND FLOOR SINKS FROM ELECTRONIC TRAP PRIMERS.
- I. PIPING SHOWN ON ENPLANING LEVEL SHEETS DENOTED WITH KEY NOTE B IS LOCATED IN THE CEILING SPACE OF THE DEPLANING LEVEL.

1. PRIME NEW FLOOR DRAIN(S)/SINK(S) WITH EXISTING TRAP PRIMER.

	Port of Portland	
  PAE pae-engineers.com	151 SW 1st Avenue #300 Portland, OR 97204 503.226.2921 pae-engineers.com	
2025D031 DESIGN NUMBER	103101 PROJECT NUMBER	

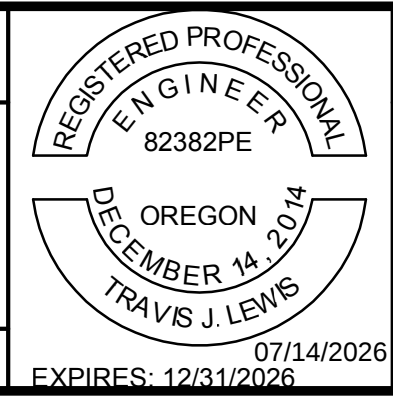

SUBMITTED BY	BRIAN FRANCIS		
DESIGNED BY	E. WALCZYK		
DRAWN BY	C. RICHARDS		
CHECKED BY	T. LEWIS		
DATE	JULY 2026		
SHEET NO.	93	TYPE	CD
DRAWING NO.		DISC. SHT. NO.	
PDX 2026-510		P2.08	